

#### Introduction



**Jill Clements** 

Jill is a Senior Research Engineer with DuPont and has 18 years of experience in the development of new products and new applications and currently holds 14 patents. Of those 18 years with DuPont, Jill has been in the Kevlar® business for 15 years and has worked in a variety of market segments including composites, mass transportation, the automotive industry and high-performance apparel. Jill received both her Bachelor and Master of Science degrees in Mechanical Engineering from The Georgia Institute of Technology and was Chair of the ISEA Hand Protection Group (2017-2018).






The keys to cut resistance



- Cut resistance is a function of basis weight and material composition
- Cut resistance can be increased by:
  - Increasing basis weight (14 oz/yd² Kevlar® better than 8 oz/yd² Kevlar®)
  - Using engineered yarns made with stainless steel wire or yarns blended with glass fibers in the core

Global recognition of cut standards

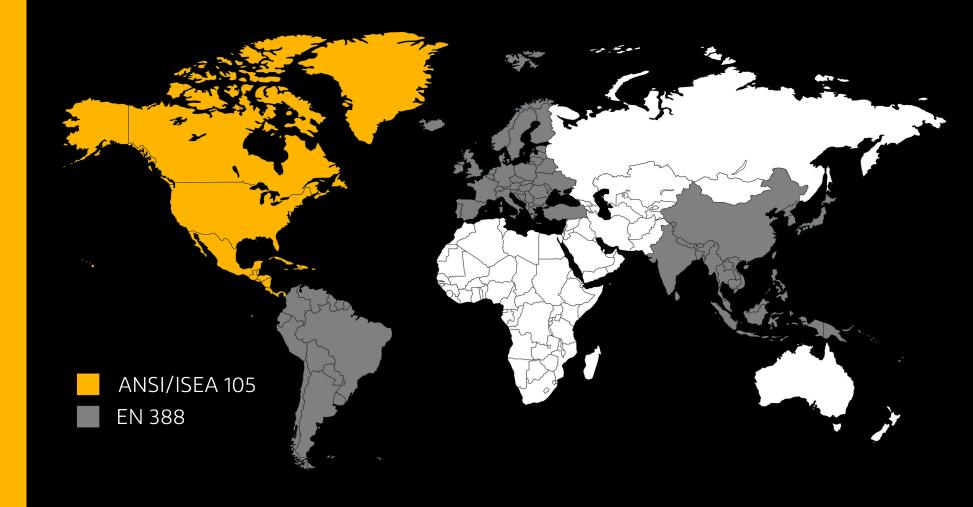



## Hand protection standards



- Standards are developed and used to specify test methods that replicate the threats potentially seen in a task
- Standards usually refer to levels that are achieved by the product tested according to a certain test method
- Why do we need standards? Don't we already have regulations in place that tell us what to do? What about OSHA?


## Hand protection standards



- ANSI/ISEA 105-16: American National Standard for Hand Protection Classification
  - ANSI: American National Standards Institute
  - ISEA: International Safety Equipment Association
- U.S. Standard only it is not a government regulation like OSHA
- Indicates the mechanical, thermal, chemical and dexterity requirements, among others
- The final performance is classified by levels

# Why were changes made?

- Glove performance in the cut-resistant market has improved tremendously in recent years as new yarns and new technologies have been developed
- Increased granularity is needed within the current level 4 range (1500-3499 grams)

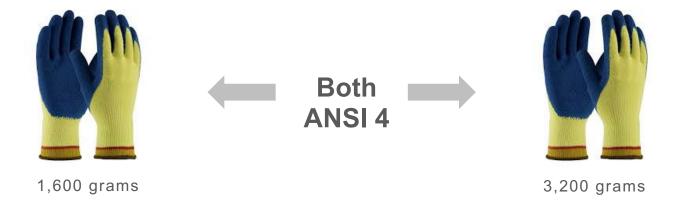


The goal of moving to a single machine is to reduce the complexity and improve the reliability of the test method


# What are the changes? – ANSI/ISEA 105




- Key area of focus for the changes is the area of cut-resistance testing and classification
  - ASTM F2992-15
  - ASTM F1790 methods are no longer referenced
- The move to a single test method will give more consistent ratings between glove manufacturers
- There will be an expansion of the classification levels
- There is a change to the test for Abrasion Resistance
- There is incorporation of a puncture test for hypodermic needles

# Move to a single test method: TDM-100

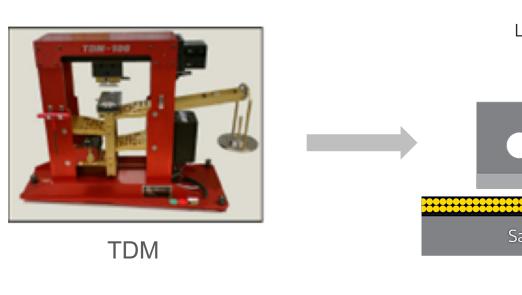

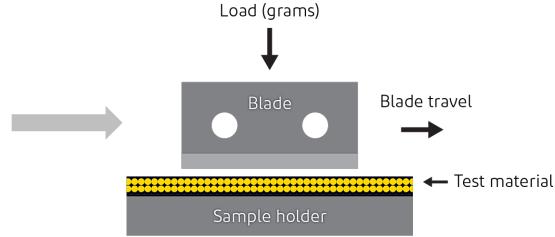

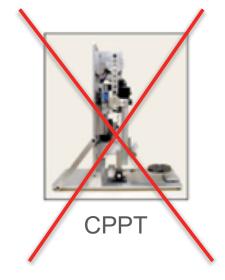

- A new blade is required for each cut
- The blade is moved across the sample once
- The cut resistance is determined by the load required to cut a 20mm reference distance



# What are the changes? – new levels

#### **ANSI/ISEA 105 Standard**

	Old Standard			
Load (grams)	ANSI/ISEA 105-11			
<200	0			
201-499	1			
500-999	2			
1000-1499	3			
1500-3499	4			
>3500	5			

Items highlighted in yellow represent the expanded ANSI/ISEA cut standard.

	New standard		
Load (grams)	ANSI/ISEA 105-16		
<200	-		
201-499	A1		
500-999	A2		
1000-1499	АЗ		
1500-2199	A4		
2200-2999	A5		
3000-3999	A6		
4000-4999	A7		
5000-5999	A8		
>6000+	A9		






EN 388


EN 388 (European norm)

Old standard	Example	2	5	4	X
Abrasion (cycles)	Level 2				
Cut (Coup test)	Level 5	$\leftarrow$			
Tear (N)	Level 4	$\leftarrow$			
Puncture (N)	Not tested	$\leftarrow$			

- Standard referenced throughout the entire EU
- Government regulated
- Gloves are marked with levels of mechanical performance only
- Although a European standard, it is recognized globally


# Current EN 388 test equipment

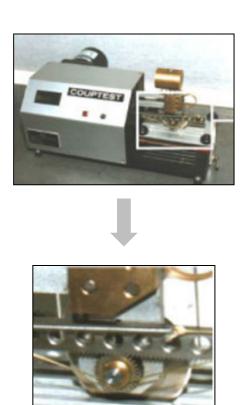

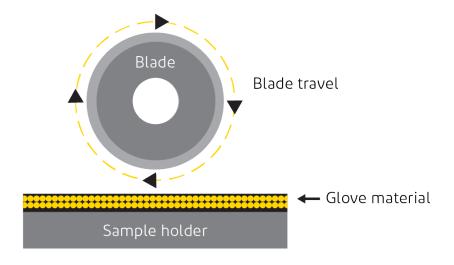

- The blade is reused
- The cut resistance measured is a ratio of performance of the sample to the performance of a control fabric (cotton canvas)
- ISO 13997 is recommended instead for materials with higher cut performance


## Inclusion of the TDM-100

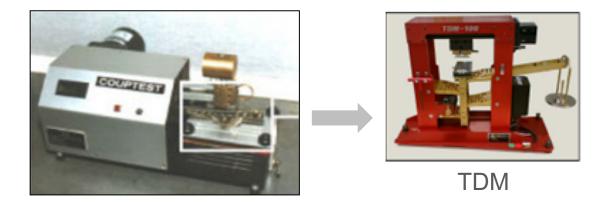

- The most significant change will be in regard to the acceptance of the ISO 13997 (TDM) cut test method (accounts for dulling of blade in Coup Test)
  - The results will still be reported in Newtons, not grams
  - Levels achieved through the use of the TDM method will be lettered
     A through F to avoid confusion with the Coup test method results
- There will be a change of the abrasive paper used
- A new impact-protection threshold will be added



What are the changes? – EN 388

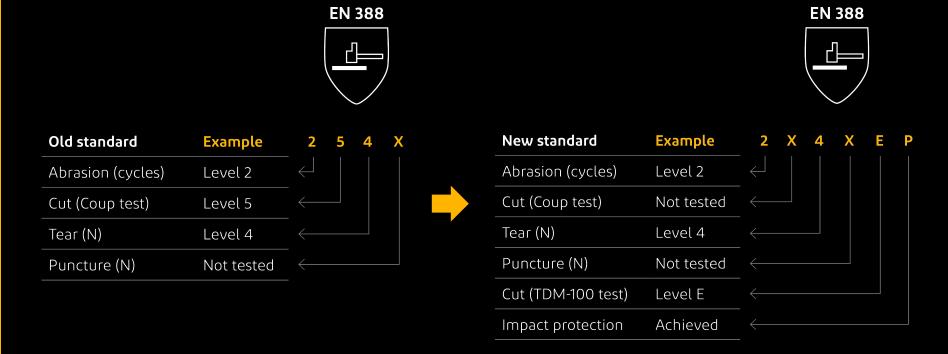

If Impact Protection is not measured, that digit is left blank.



What are the changes? – EN 388




New standard	Example	2 X 4 X E P
Abrasion (cycles)	Level 2	
Cut (Coup test)	Not tested	
Tear (N)	Level 4	
Puncture (N)	Not tested	
Cut (TDM-100 test)	Level E	
Impact protection	Achieved	

New EN level	Level A	Level B	Level C	Level D	Level E	Level F
TDM cut resistance (N)	2	5	10	15	22	30

Coup method cannot be used interchangeably with ASTM & ISO

**EN 388 Coup method** 






ANSI/ISEA 105-16 & ISO 13997



TDM



What are the changes? – EN 388

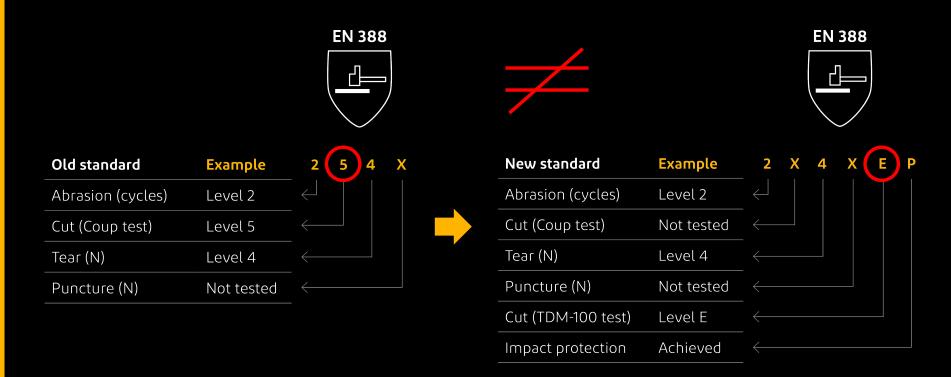

No correlation between Coup method and TDM-100 method



When can I compare EN to ANSI?



New standard	Example	2 X 4 X (E) F
Abrasion (cycles)	Level 2	
Cut (Coup test)	Not tested	_
Tear (N)	Level 4	_
Puncture (N)	Not tested	
Cut (TDM-100 test)	Level E	
Impact protection	Achieved	<del>-</del>

Only when TDM has been applied to both



# When can I compare EN to ANSI?

		Load (grains)	ANSI/ISEA 105-16
		<200	_
		201-499	A1
TDM cut resistance (n)	Level	500-999	A2
2	А	1000-1499	A3
5	В	1500-2199	A4
10	С	2200-2999	A5
15	D	3000-3999	A6
22	Е	4000-4999	A7
30	F	5000-5999	A8
		>6000+	A9

Load (grams) ANSI/ISEA 105-16

Only when TDM has been applied to both



#### Summary

- Both the ANSI/ISEA 105 and EN 388 Standards for the evaluation of cut-resistant materials have been updated
- Most significant changes will be in regard to the:
  - Expansion of the ANSI/ISEA levels from 5 to 9, with more granularity above the 1500gram level; new levels are prefaced with an "A"
  - Acceptance and inclusion of the ISO 13997 TDM-100 method in the revised EN 388
     Standard; levels achieved through the use of the TDM method will be lettered A
     through F to avoid confusion with the Coup test method results
- There is a change to the Abrasion section for both ANSI/ISEA and EN
- A new impact-protection threshold will be added to EN 388
- A new method for determination of hypodermic needle puncture has been added to ANSI/ISEA



This information corresponds to our current knowledge on the subject and may be subject to revision as new knowledge becomes available. It is your responsibility to investigate other sources of information on this issue that more appropriately address your product and its intended use. This information is not intended for use by you or others in advertising, promotion, publication or any other commercial use. DuPont makes no warranties of any kind regarding this information and assumes no liability whatsoever in connection with any use of this information. This information is not a license to operate under, or intended to suggest infringement of, any existing trademarks or patents.

DuPont TM, the DuPont Oval Logo, and all trademarks and service marks denoted with TM, SM or ® are owned by affiliates of DuPont de Nemours, Inc. unless otherwise noted. © 2019 DuPont.

© 2019 DuPont. Confidential for training DuPont personnel and personnel of authorized distributors. These slides & their content cannot be used without the expressed written consent of DuPont.